

**MODEL No's: AS3000.V2, AS5000, AS5000M, AS7500, AS10000**

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



**IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY.**

### 1. SPECIFICATION

Model No.	AS3000.V2	AS5000	AS5000M	AS7500	AS10000
Capacity:	2.5Tonne each stand	5Tonne each stand	5Tonne each stand	7.5Tonne each stand	10Tonne each stand
	5Tonne per pair	10Tonne per pair	10Tonne per pair	15Tonne per pair	20Tonne per pair
Min. Height:	503mm	403mm	457mm	482mm	482mm
Max. Height:	700mm	530mm	735mm	787mm	787mm

**N.B. IN ORDER TO OBTAIN THE MAXIMUM CAPACITIES SHOWN, THE VEHICLE MUST BE EVENLY SUPPORTED BY BOTH STANDS.**

### 2. SAFETY INSTRUCTIONS

- ✓ Ensure that the axle stands are in good order and condition. **DO NOT** use them if they are damaged in any way.
- ✓ Apply the handbrake and chock the wheels before jacking up the vehicle and using these axle stands (place automatics in 'Park').
- ✓ Raise centre column to required height and fully insert pin. Ensure the dead centre of stand crutch is located under vehicle's jacking point. Refer to the vehicle manufacturer's handbook for the location of the jacking points.
- ✓ **DANGER! Great care must be taken to ensure that the vehicle is lowered slowly and carefully onto the centre of the axle stands.**
- ✓ Ensure that the vehicle and stands are stable before starting work.
- ✗ **DO NOT** use on soft ground or tarmacadam. Use on concrete only.
- ✗ **DO NOT** use a single stand by itself. Only use in pairs.
- ✗ **DO NOT** support more than the maximum capacity, as stated on the axle stands.
- ✗ **DO NOT** use four stands on one vehicle.
- ✗ **DO NOT** lift one end of the vehicle, if the other end is already on stands, or there is a risk the load will topple.
- ✗ **DO NOT** use for three wheeled vehicles or trailers. Refer to manufacturer's instructions.
- ✓ When not in use, store the axle stands in a safe, dry, childproof location.
- ☐ **WARNING!** The warnings, cautions and instructions referred to in this manual cannot cover all possible conditions and situations that may occur. It must be understood that common sense and caution are factors which cannot be built into this product, but must be applied by the operator.

#### ⚠ WARNING!

**DO NOT OVERLOAD THE AXLE STANDS BEYOND RATED CAPACITY. OVERLOADING CAN CAUSE DAMAGE TO, OR FAILURE OF, THE AXLE STANDS. POSITION LOAD ON CENTRE OF CRUTCH ONLY. ALWAYS USE STANDS IN PAIRS ON A HARD LEVEL SURFACE CAPABLE OF SUSTAINING THE LOAD. USE OF STANDS ON OTHER THAN HARD LEVEL SURFACES CAN RESULT IN LOAD INSTABILITY AND POSSIBLE LOSS OF LOAD. DO NOT USE ON TARMACADAM. FAILURE TO FOLLOW THESE INSTRUCTIONS, MAY RESULT IN DAMAGE TO AXLE STANDS, LOSS OF LOAD - RESULTING IN PROPERTY DAMAGE, SERIOUS PERSONAL INJURY AND/OR LOSS OF LIFE.**

### 3. USE

- 3.1. Refer to vehicle's handbook for correct jacking procedure. Check to ensure manufacturer's recommended jacking points are in good condition.
- 3.2. Position the axle stands under the specified support points and adjust to the required height.
  - ⚠ **WARNING! ENSURE THAT THE PIN HAS PASSED RIGHT THROUGH THE COLUMN SO THAT BOTH ENDS ARE VISIBLE. IN THE HIGHEST POSITION BOTH ARMS OF THE PIN MUST PASS THROUGH THE CRUTCH TUBE - THERE MUST NEVER BE MORE THAN FOUR HOLES VISIBLE ABOVE THE STAND TUBE.**
- 3.3. Carefully and slowly lower the load onto the axle stands. Ensure load bearing points sit in the centres of the axle stand crutches and that the axle stands are stable.
  - ⚠ **DANGER! You must follow instructions carefully and DO NOT load axle stand off centre. Failure to heed these warnings may cause damage and/or injury or loss of life!**



### 4. MAINTENANCE & INSPECTION

- 4.1. Before each use, check that the axle stands and stand welds are not cracked and that there are no missing or damaged parts. *Any suspect axle stand must be removed from service immediately.*
- 4.2. Due to the potential hazards associated with axle stands, do not misuse, or make any modification to the axle stands or components.
- 4.3. It is the responsibility of the owner to ensure that the operator has read these instructions, together with the safety features on the side of the stand, and that the operator is familiar with the use and limitations of the axle stands.

**NOTE:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**IMPORTANT:** No liability is accepted for incorrect use of this product.

**WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim.

**INFORMATION:** For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.