

## INSTRUCTIONS FOR: 20LTR WET AND DRY VACUUM CLEANER 1250W MODEL No: PC195SD

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

*IMPORTANT:* PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.

# 1. SAFETY

#### 1.1 ELECTRICAL SAFETY

**WARNING!** It is the responsibility of the owner and the operator to read, understand and comply with the following:

You must check all electrical products, before use, to ensure that they are safe. You must inspect power cables, plugs, sockets and any other connectors for wear or damage. You must ensure that the risk of electric shock is minimised by the installation of appropriate safety devices. A Residual Current Circuit Breaker (RCCB) should be incorporated in the main distribution board. We also recommend that a Residual Current Device (RCD) is used. It is particularly important to use an RCD with portable products that are plugged into a supply which is not protected by an RCCB. If in any doubt consult a qualified electrician. You may obtain a Residual Current Device by contacting your Sealey dealer.

- You must also read and understand the following instructions concerning electrical safety.
   1.1.1 The Electricity at Work Act 1989 requires that all portable electrical appliances, if used on business premises, are tested by a gualified electrician, using a Portable Appliance Tester (PAT), at least once a year.
- 1.1.2 The Health & Safety at Work Act 1974 makes owners of electrical appliances responsible for the safe condition of those appliances and the safety of the appliance operators. If in any doubt about electrical safety, contact a gualified electrician.
- 1.1.3 Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply. See 1.1.1. and 1.1.2. and use a Portable Appliance Tester.
- 1.1.4 Ensure that cables are always protected against short circuit and overload.
- 1.1.5 Regularly inspect power supply cables and plugs for wear or damage and check all connections to ensure that none are loose.
- 1.1.6 **Important:** Ensure that the voltage marked on the appliance matches the power supply to be used and that the plug is fitted with the correct fuse see fuse rating at right.
- 1.1.7 **DO NOT** pull or carry the appliance by the power cable.
- 1.1.8 **DO NOT** pull the plug from the socket by the cable.
- 1.1.9 **DO NOT** use worn or damaged cables, plugs or connectors. Immediately have any faulty item repaired or replaced by a qualified electrician. When a BS 1363/A UK 3 pin plug is damaged, cut the cable just above the plug and **dispose of the plug safely**. Fit a new plug according to the following instructions (UK only).
  - a) Connect the GREEN/YELLOW earth wire to the earth terminal 'E'.
  - b) Connect the BROWN live wire to the live terminal 'L'.
  - c) Connect the BLUE neutral wire to the neutral terminal 'N'.


d) After wiring, check that there are no bare wires, that all wires have been correctly connected, that the cable outer insulation extends beyond the cable restraint and that the restraint is tight.

Double insulated products, which are always marked with this symbol 
, are fitted with live

- (brown) and neutral (blue) wires only. To rewire, connect the wires as indicated above DO NOT connect either wire to the earth terminal.
   1.1.10 Products which require more than 13 amps are supplied without a plug. In this case you must contact a qualified electrician to ensure that a suitably rated supply is available. We recommend that you discuss the installation of an industrial round pin plug and socket with your electrician.
- 1.1.11 If an extension reel is used it should be fully unwound before connection. A reel with an RCD fitted is preferred since any appliance plugged into it will be protected. The cable core section is important and should be at least 1.5mm<sup>2</sup>, but to be absolutely sure that the capacity of the reel is suitable for this product and for others which may be used in the other output sockets, we recommend the use of 2.5mm<sup>2</sup> section cable.

#### 1.2 GENERAL SAFETY

- ✓ Disconnect the cleaner from the power supply before servicing, changing accessories, or performing any maintenance.
- ✓ Use only genuine parts and accessories. Unauthorised parts and accessories may be dangerous and will invalidate your warranty.
- ✓ Maintain the cleaner in good condition. Use an authorised agent for servicing. Keep machine clean, but **DO NOT** use solvents.
- ✓ For dry vacuuming ensure the cartridge filter is firmly in place before operating the cleaner.
- X DO NOT operate the unit without the cartridge filter in place (except when wet vacuuming). Using the cleaner without a cartridge filter may cause damage to the vacuum cleaner and will invalidate your warranty.
- ✓ Wear protective clothing and gloves.
- X DO NOT place attachments close to your face (especially eyes, ears, etc). DO NOT point the hose end at other persons or animals.
- A DANGER! DO NOT vacuum hot or glowing ash, cigarette ends, inflammable, explosive, corrosive or other dangerous substances.
- X DO NOT operate the unit without the dust bag or optional cartridge filter (except when wet vacuuming).
- X DO NOT leave machine running unattended. Turn power supply OFF, and DO NOT leave the vicinity until motor has come to a complete stop.
- X DO NOT operate the cleaner while under the influence of drugs, alcohol or impairing medication, or if you are tired.
- **X DO NOT** use the cleaner in the rain or in very damp conditions.
- ✗ DO NOT use the cleaner for a task it is not designed to perform.
   ✓ When not in use, store the cleaner in a safe, dry, childproof location.
  - **NOTE:** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

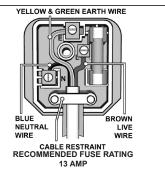

### 2. INTRODUCTION


High powered, lightweight unit with blower facility. Constructed from stainless steel, the drum unit is mounted on four castor wheels. Tool storage points on head and base. Supplied with 4mtr cable, 3-pin plug and accessory tool kit. Including three rigid extension tubes, cartridge filter, wet-use foam filter, cloth filter and dust bag.


17 . . . . . . . . . . . . Crevice tool

Item	Description
1	Handle
2	Top section
3Blov	ver connection
4	Filter basket
5	Floor nozzle
6Dry	reusable filter
7 Househol	d collector bag
8Sa	fety float valve
9	Casters (x4)
10 Foam s	leeve/wet filter
11 Extensi	on wands (x3)

#### 3. SPECIFICATION

Model No:         PC195SI           Motor Power:         1250V	
Supply:	z
Maximum Vacuum Pressure:	ar
Air Flow:	۱r
Drum Size:	tr
Weight:	g
Vac Accessories Ø: 35mn	n
Filter Type:Cartridge	е
Replacement Cloth Filter: PC195SD.Cl	F
Replacement Foam Filters (Pack of 10): PC200FF1	0
Optional Dust Bags (Pack of 5):	5

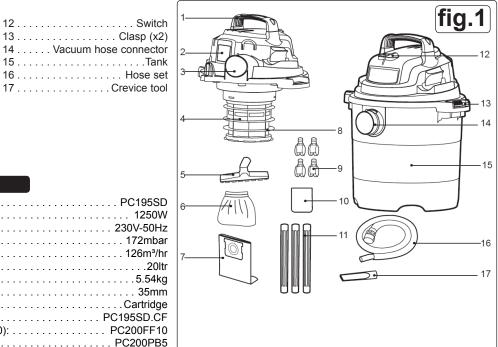

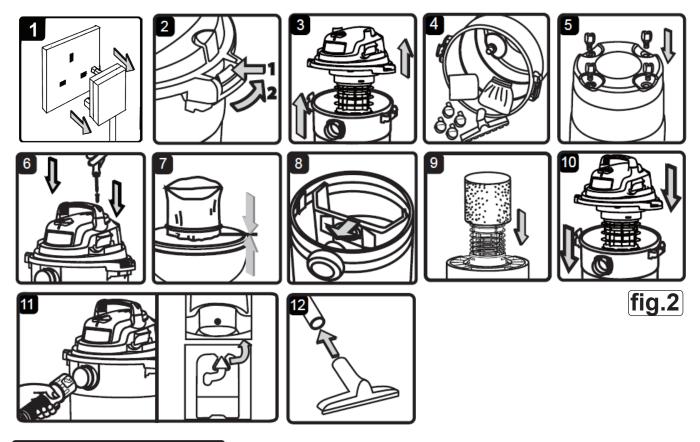


#### 4. ASSEMBLY

- WARNING! DO NOT plug in the mains cable. Make sure the plug is disconnected before assembling the vacuum.
- Undo the clasps (Fig.2.2). 4.1.
- Lift the top section off the container (Fig.2.3). 4.2.
- Remove the contents from inside the container (Fig.2.4). 4.3.
- Turn the container upside down and insert the four casters. Check that they are mounted correctly (Fig.2.5). 4.4.
- 4.5. Insert the handle into the slots on the power head and pressure into place (Fig.2.6).
- 4.6. For dry vacuuming, install the supplied dust filter and dust bag (Fig.2.7, Fig.2.8).


- 4.7. For wet vacuuming, install the supplied foam filter (Fig.2.9).
- **4.8.** Place the top section back on the container (Fig.2.10).
- 4.9. Align the top section with the clasps, and snap into place by applying pressure until clasps latch into place (Fig.2.10).
- **4.10.** Insert the large end of the hose into the front inlet of the container, and lock it by pushing and twisting (Fig.2.11).
- 4.11. Choose the desired accessories and push onto the suction tube (Fig.2.12).

#### 5. DRY VACUUMING

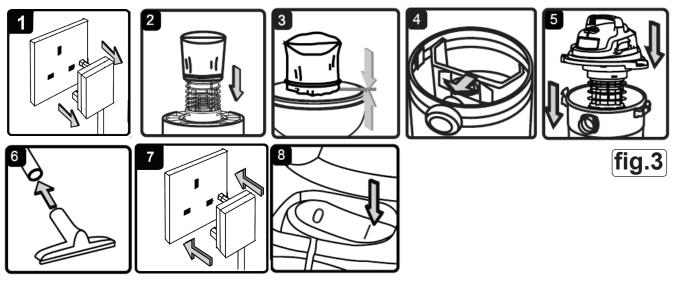

- DO NOT vacuum in areas with flammable gases, vapours or explosive dusts in the air. Flammable gases include, but are not limited to: lighter fluid, solvent type cleaners, oil based paints, gasoline, alcohol or aerosol sprays. Explosive dusts include, but are not limited to: coal, magnesium, grain or gun powder. To reduce the risk of health hazards from vapours or dust, DO NOT vacuum toxic materials.
   WARNING! Be sure to read, understand and apply Section 1, entitled 'Safety'.
- **Note:** The use of an incorrect dust bag will void the warranty.
- **5.1.** Verify that the mains cable is disconnected. (Fig.3.1).
- 5.2. In order to prepare your vacuum for dry vacuuming, verify that the dust filter is clean and dry. Place the dust filter over the filter basket and centre it. Push down until the mounting ring of the dust filter is positioned against the ribs of the top section (Fig.3.2).
- **5.3.** Verify that the dust filter completely covers the filter basket. Also verify that all edges of the dust filter are secure under the mounting ring (Fig.3.3).
- **5.4.** Verify that the dust bag is installed to the inside of the tank (Fig.3.4).
- 5.5. Place the top section back on the container, and secure it in place using the clasps (Fig.3.5).
- **5.6.** Insert the larger end of the flexible hose into the front inlet on the tank, and lock in place. Push the required attachment onto the free end of the hose or extension (Fig.3.6).
- **5.7.** Plug the mains cable (Fig.3.7).
- **5.8.** Turn the motor on by flipping the switch to the "I" position (Fig.3.8).
- 5.9. Once you have finished vacuuming, flip the switch to the "O" position and unplug the mains cable.
- Note: DO NOT use the dust filter for wet or sharp materials.
- DO NOT use the dust bag for liquid vacuuming.

#### 6. WET VACUUMING

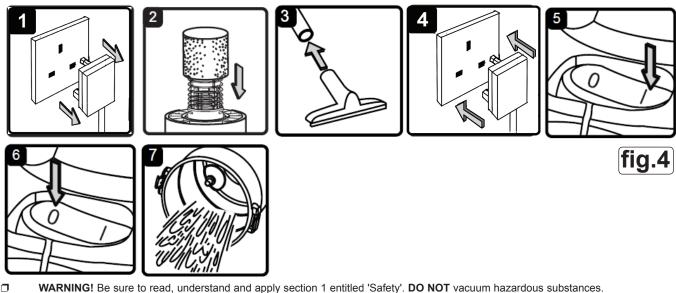


- **Note: DO NOT** use the dust filter for wet materials.
- 6.1. Check that the mains cable is disconnected. (Fig.4.1). Check that the container is clean and free of dust and dirt.
- **6.2.** Remove the dust filter and dust bag, and install a foam filter over the filter basket, and place the top section back on the container (Fig.4.2).
- 6.3. Fit the desired nozzle onto the vacuum hose (Fig.4.3).

- 6.4. Verify that the switch is in the 'O' position before plugging in the mains cable (Fig.4.4).
- 6.5. Turn the motor on by flipping the switch to the "I" position (Fig.4.5).
- 6.6. After use, flip the switch to the "O" position and unplug the power cord (Fig.4.6), then empty and dry the container (Fig.4.7).

Remember! The foam filter must be removed after wet vacuuming, and a dust filter must be installed before dry vacuuming again.

**IMPORTANT!** When vacuuming large quantities of liquids, do not immerse the nozzle completely in the liquid; leave a gap at the tip of the nozzle opening to allow air inflow. The machine is fitted with a float valve that stops the suction action when the container reaches its maximum capacity. You will notice an increase in motor speed. When this happens, turn off the machine, disconnect from the mains, and drain the liquid into a suitable receptacle or drain. To continue vacuuming, refit the container with the container. After wet vacuuming, turn the machine off and remove the plug. Empty the container, clean and dry the inside and outside before storage.

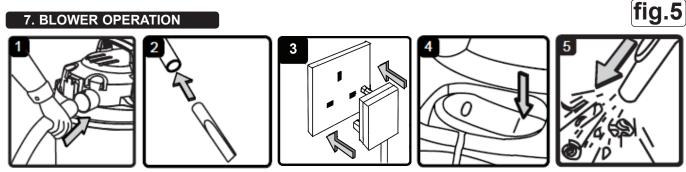

- WARNING! Always wear safety goggles before using the blower. Keep bystanders away from blowing debris and wear a dust mask if blowing creates dust that might be inhaled.
- 7.1. Insert the large end of the hose into the blower connection in the top of the motor housing (Fig.5.1).
- 7.2. Fit the desired nozzle to the vacuum hose (Fig.5.2).
- 7.3. Ensure the power switch is turned off and plug in (Fig.5.3)
- 7.4. Turn the motor on by flipping the switch to the "I" position (Fig.5.4).
- 7.5. The unit will now blow through the vacuum hose and can be used to clear obstructions within the hose (Fig.5.5).
- WARNING! If the hose is still blocked after a few seconds, turn off the unit and clear the hose manually.

#### 8. MAINTENANCE





- 8.1. Verify that the power cable is disconnected (Fig.6.1).
- **8.2.** Disconnect the hose from the container (Fig.6.2).
- 8.3. Undo the clasps and remove the top section from the container (Fig.6.3).
- 8.4. Clear all dirt or debris from the container and hose (Fig.6.4).
- 8.5. Clean the foam filter or dust filter by washing it with a mild soapy solution (Fig.6.5).
- 8.6. Check the hoses, attachments, and power cord to verify that they have not been damaged (Fig.6.6).
- **IMPORTANT!** Change the dust filter regularly.

**IMPORTANT!** If the machine is used without the dust filter, the motor will burn out and the warranty will be voided. Always keep spare filters on hand.

fig.6

### 9. TROUBLESHOOTING

Problem	Possible Causes	Corrective Action
Vacuum will not operate.	No power supply	Check power supply: cable, circuit breakers, fuses
	Faulty power cable	Unplug and check the power cable. If damaged, have it repaired by a professional.
	Container full of liquid.	Empty container.
Dust comes from the motor cover.	The dust filter is missing or damaged.	Attach or replace dust filter.
Reduced efficiency and motor speed/vibration.	Blockage in the nozzle, hose, or the vacuum inlets, or the dust filter is blocked by fine dust.	Check nozzle, hose and container inlets for blockage. Take off the dust filter and wash clean it. Reuse it when it is dry. If necessary use a new dust filter.



Parts support is available for this product. To obtain a parts listing and/or diagram, please log on to www.sealey.co.uk, email sales@sealey.co.uk or telephone 01284 757500.



#### Environmental Protection. Recycle unwanted materials instead of disposing of them as

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycle centre and disposed of in a manner which is compatible with the environment.



## WEEE Regulations.

1284 757500

A 01284 703534

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment. When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim. INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.



Sole UK Distributor, Sealey Group, Kempson Way, Suffolk Business Park, Bury St. Edmunds, Suffolk, IP32 7AR

© Jack Sealey Limited

Original Language Version

PC195SD Issue No.1 24/07/14

www.sealey.co.uk

E