


PARTS LIST FOR:

AIR GREASE GUN

Model: **SA40**

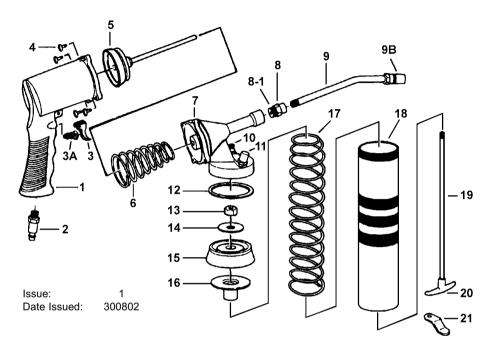

| Item | Part No. | Description | Item | Part No. | Description |
|------|-----------|----------------|--------------------|-------------|--------------------|
| 1 | SA40/01 | Hand Grip | 12 | SA40/12 | Gasket |
| 2 | SA40/02 | Air Fitting | 13 | SA40/13 | Plunger Nut |
| 3 | SA40/03 | Trigger | 14 | SA40/14 | Plunger Washer |
| 3A | SA40/03A | Air Valve Assy | 15 | SA40/15 | Plunger |
| 4 | SA40/04 | Body Screw | 16 | SA40/16 | Backlash Gasket |
| 5 | SA40/05 | Air Plunger | 17 | SA40/17 | Long Spring |
| 6 | SA40/06 | Short Spring | 18 | SA40/18 | Container Tube |
| 7 | SA40/07 | Housing Cap | 19 | SA40/19 | Plunger Rod |
| 8 | SA40/08 | Adaptor | 20 | SA40/20 | Plunger Handle |
| 8-1 | SA40/08-1 | O-Ring | 21 | SA40/21 | Catch Plate |
| 9 | SA40/09 | Spout | Option (not shown) | | |
| 9B | SA40/9B | Nozzle | - | SA40/09A | Flexible Spout, 9" |
| 10 | SA40/10 | Air Vent Valve | | G/ (10/00/) | r ioxibio opout, o |
| 11 | SA40/11 | Filler Plug | | | |

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this equipment.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.



Sole UK Distributor, Sealey Group, Bury St. Edmunds, Suffolk.



E-mail: sales@sealey.co.uk
Web: www.sealey.co.uk



INSTRUCTIONS FOR: AIR GREASE GUN Madel SA40

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY, PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY INSTRUCTIONS

- ✓ Follow workshop Health & Safety rules, regulations and conditions when using the grease gun.
- □ WARNING! Disconnect from air supply before changing accessories or servicing.
- ✓ Maintain the gun in good condition and replace any damaged or worn parts. Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.
- ☐ WARNING! Check that the correct air pressure is maintained and not exceeded.
- ✓ Keep air hose away from heat, oil and sharp edges. Check hose for wear before each use and ensure that all connections are secure.
- ✓ Wear approved safety gloves and eye and ear protection.
- ✓ Keep gun clean and in good working order for best and safest performance.
- ✓ Keep children and unauthorised persons away from the work area.
- x **DO NOT** use the gun for a task it is not designed to perform.
- □ WARNING! DO NOT use gun if damaged or thought to be faulty. Contact your local service agent.
- ☐ WARNING! Grease is delivered at high pressure. DO NOT point the grease nozzle at yourself or others.
- x DO NOT operate the trigger until the nozzle is firmly attached to the receiving grease fitting.
- x **DO NOT** drop, throw, or abuse, the gun.
- **DO NOT** carry the gun by the air hose, or yank the hose from the air supply.
- x DO NOT operate gun if you are tired or under the influence of alcohol, drugs or intoxicating medication.
- **x DO NOT** direct air from the air hose at yourself or others.
- ✓ When not in use, disconnect from air supply and store in a safe, dry, childproof location.

2. INTRODUCTION & SPECIFICATION

Die-cast head and body with chromed steel grease tube. Includes rigid extension tube and 4-jaw coupler. Trigger operated single impulse gun with 3-way fill and air bleed valve. Accepts 400g grease cartridges, bulk or manual fill.

Specification

3. PREPARATION FOR USE

Air Supply

Recommended hook-up is shown in fig. 1.

- 3.1. Ensure that the trigger is in the Off position when connecting to the air supply.
- WARNING! Ensure that the air supply is clean and is between 30-150psi. Too high an air pressure and/or unclean air will shorten the life of the gun due to excessive wear, and may be dangerous, causing damage and/or personal injury.
- .2. Drain the compressor air tank daily. Water in the air line will damage the gun.
- 3.3. Clean compressor air inlet filter weekly.